


# CCW Installation With D-Spacer

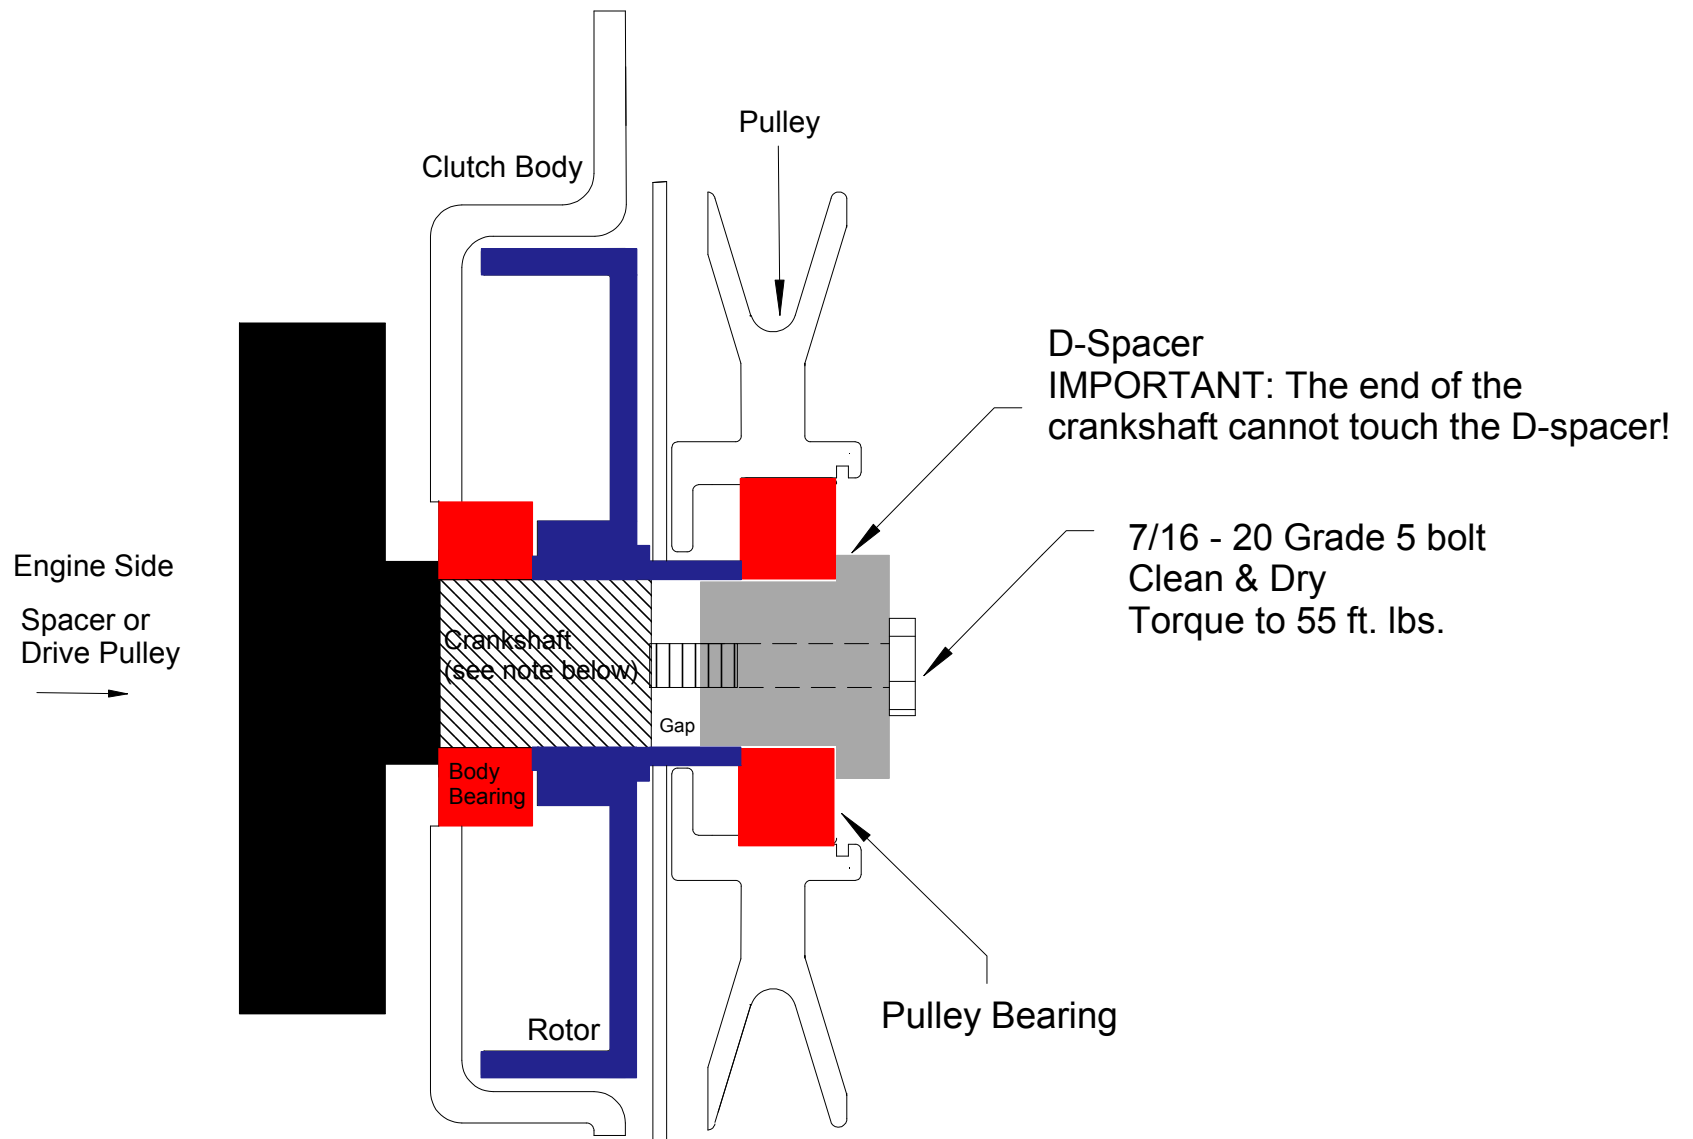

Note: Crankshaft MUST NOT Touch the D-Spacer. If the crankshaft touches the D-Spacer the clutch will fail