


CCW Installation With NO D-Spacer

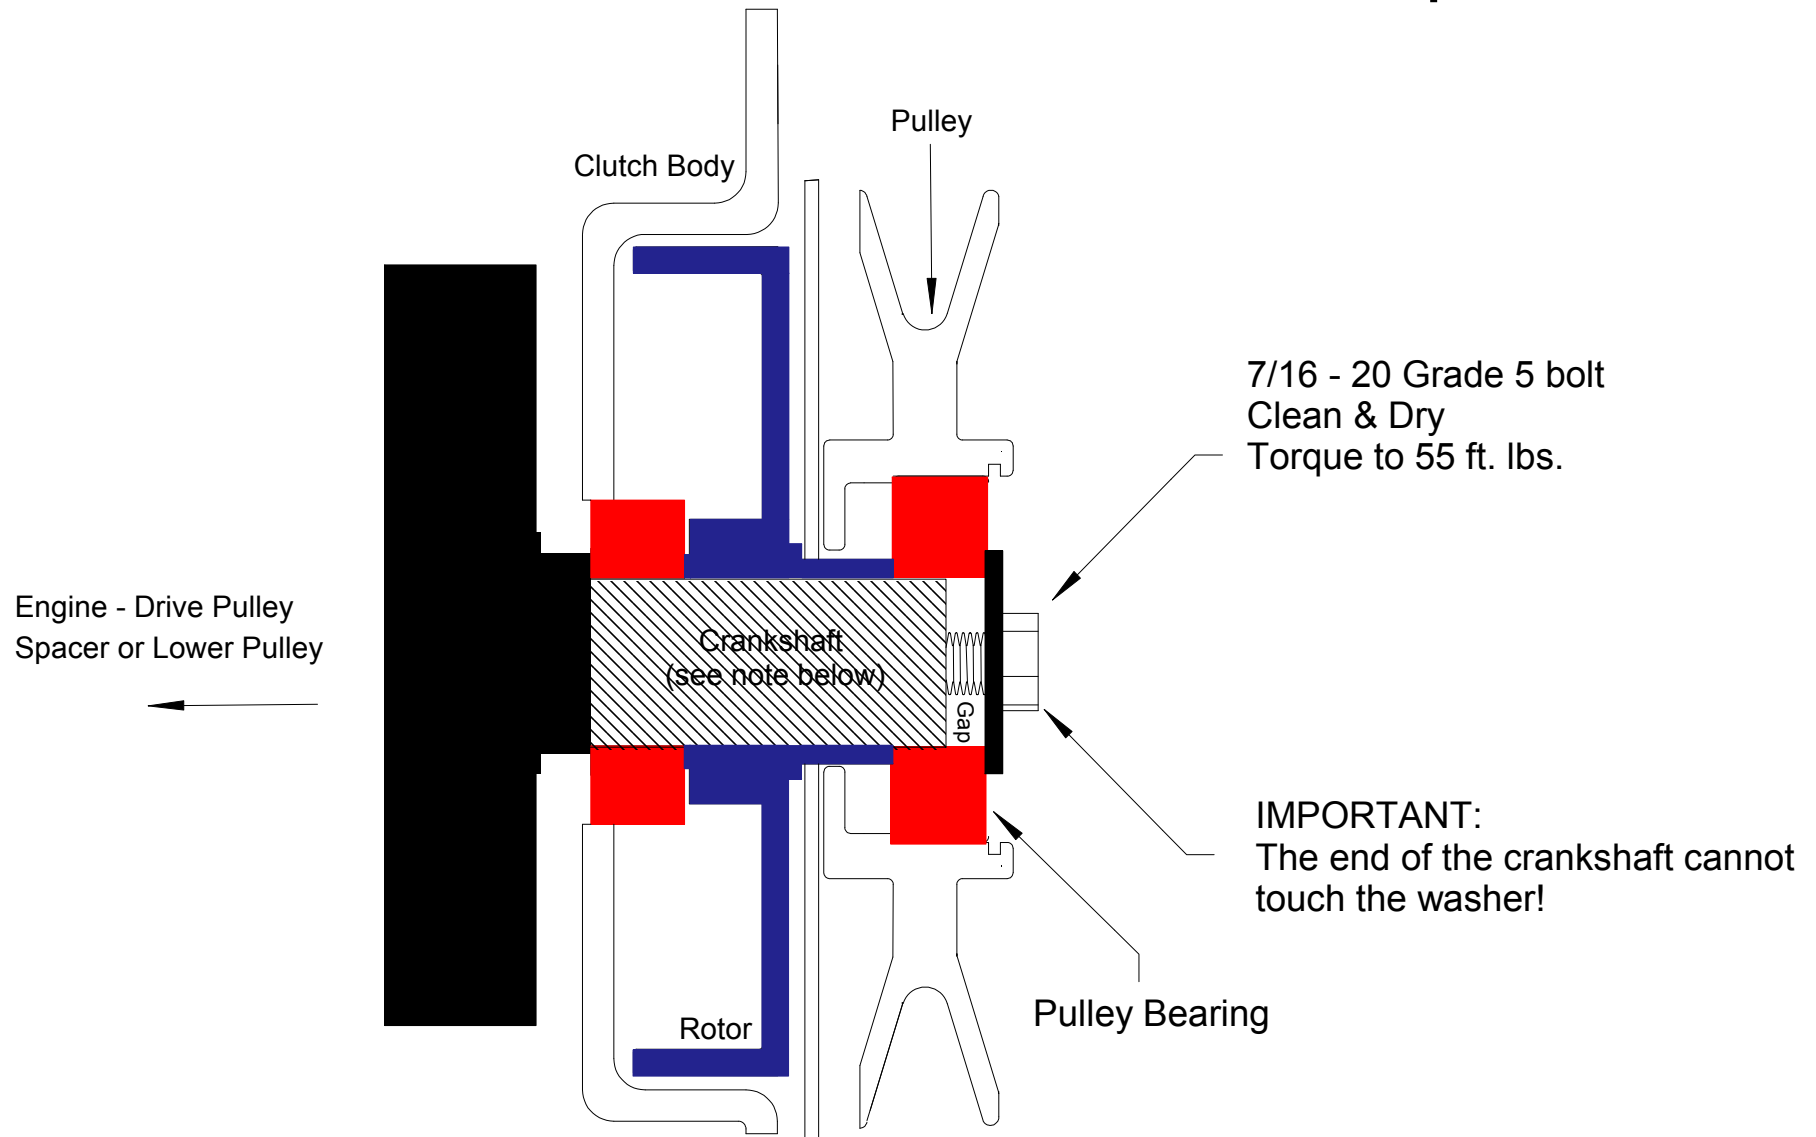

Note: Crankshaft MUST have contact with both bearings. If the crankshaft is too short and does not enter into the second bearing the clutch will fail.