


# CW Installation with NO D-Spacer

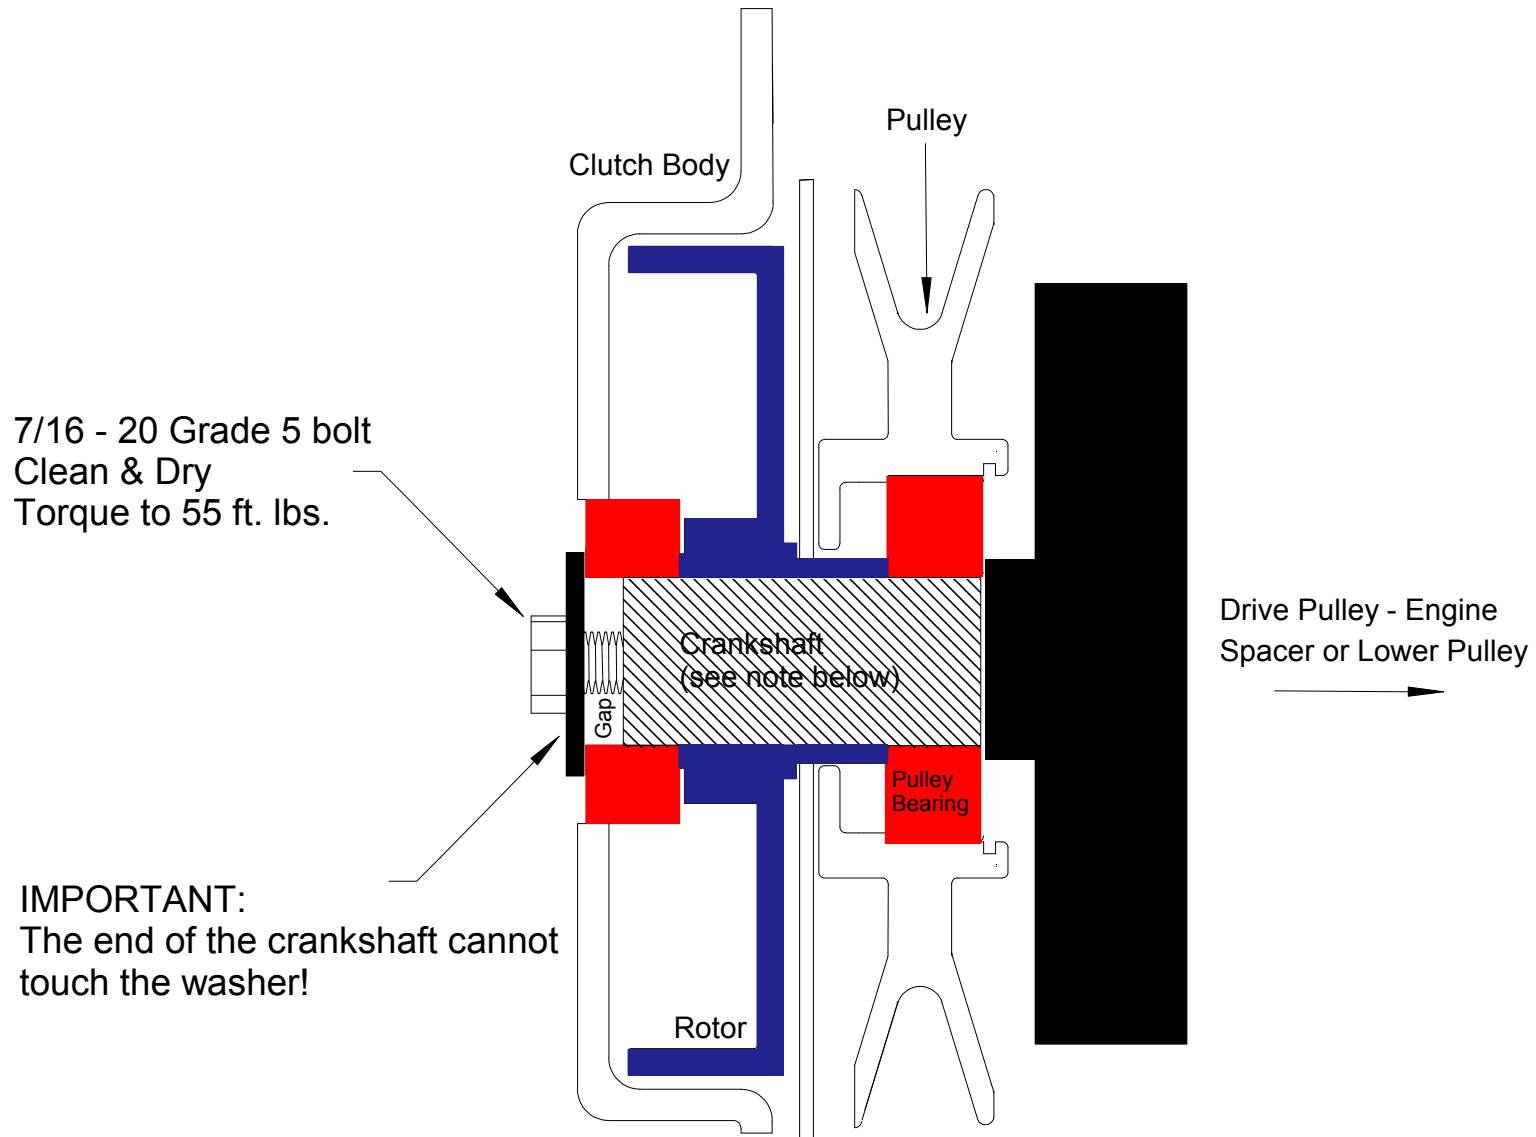

Note: Crankshaft MUST have contact with both bearings.  
If the crankshaft is too short and does not enter into the second bearing the clutch will fail.